Thinking of you

Electrolux

user manual

Electric built-in oven

Downloaded From Microwave-Manual.com Manuals

EOK76030

We were thinking of you

when we made this product

Downloaded From Microwave-Manual.com Manuals

Welcome to the world of Electrolux

You've chosen a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. Electrolux ambition is to offer a wide variety of quality products that would make your life even more comfortable. You can look at some examples on the cover in this manual. But now it's time to study this manual and start using and enjoying the benefits from your new machine. We promise that it'll make your life a little easier. Good luck!

The following symbols are used in this user manual:

Important information concerning your personal safety and information on how to avoid damaging the appliance.

General information and tips

Environmental information

31591930 3-A-05082008

Downloaded From Microwave-Manual.com Manuals

Contents

Safety instructions	5	Installation Instructions	48
Description of the Appliance	9	Electrical Connection	54
Before using for the first time	12	Disposal	55
Using the Oven	14	Guarantee/Customer Service	56
Uses, Tables and Tips	31	European Guarantee	57
Cleaning and care	45	Service	58
What to do if …	47		

CE

Subject to change without notice

Downloaded From Microwave-Manual.com Manuals

Safety instructions

Important safety instructions! Read carefully and keep for future use!

Electrical safety

- This appliance must only be connected by a **qualified installation engineer** .
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- Should the door seal and the door seal surfaces be damaged, the appliance must not be operated until they are repaired.
- **Repairs** to the appliance must **only be carried out by qualified service engineers** . Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Care Department or your dealer.

Children's safety

- Small children must be kept away from the appliance. Make sure that children do not touch the appliance when playing.
- Always heat baby food in jars or bottles with the lid or top off. After heating, stir or shake well, so that the heat is equally distributed. Before you give the baby food to the child, **please be sure to test the temperature.**
- When operating the grill (alone or in combination with the microwave) the viewing window becomes hot. Therefore keep small children away from the door of the appliance.
- Never leave children unsupervised while the appliance is operating.
- This appliance is fitted with a child safety device.

Safety during use

- This appliance should be used only for normal domestic cooking, roasting and baking of food.
- Be careful if connecting electrical appliances to sockets near to this appliance. Electrical leads must **not** be caught under the hot oven door.
- **Warning: Risk of burns!** The interior surfaces of the oven become very hot during use.
- If you use ingredients containing alcohol in the oven, a slightly flammable mixture of alcohol and air may ensue. In this case, be careful when opening the door. Do not handle any sources of heat, sparks or naked flames when doing so.
- People (including children), who, because of their physical, sensory or mental capabilities or their inexperience or ignorance, are not able to use the appliance safely, should not use this appliance without supervision by or instruction from a responsible person.

Downloaded From Microwave-Manual.com Manuals

Information on acrylamides
According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

Microwave

- Only switch the appliance on when there is food inside it. With no food in it, the appliance could be overloaded.
- Only use **microwave safe** cookware (see section Uses, Tables and Tips: Suitable Cookware and Materials)
- To protect the interior or the door of the appliance from corrosion through escaping steam (condensed water), please dry the appliance thoroughly with a cloth after each use.
- Do not leave the appliance unattended, if food is being heated or cooked in disposable containers made of plastic, paper or other flammable materials.
- If smoke appears, keep the appliance closed. Switch off the appliance and disconnect from the power supply. Do not use the appliance under any circumstances, if it is no longer working correctly.
- When heating liquids always put a coffee spoon or a glass rod in the container to avoid boiling delay. With boiling delay the boiling temperature is reached without the typical steam bubbles rising.
  If the container is shaken even slightly the liquid can suddenly boil over or spray violently. **Risk of burns!**

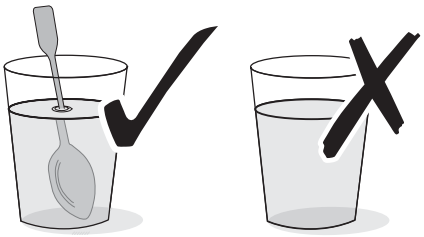

- Prick food with “skin” or “peel”, such as potatoes, tomatoes, sausages, with a fork several times before cooking so that the food does not burst.

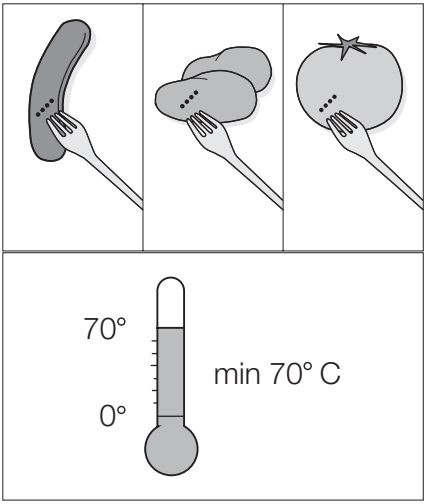

Downloaded From Microwave-Manual.com Manuals

- Ensure that a minimum temperature of **70°C** is reached when cooking/ heating food. For this please refer to the power and time data in the tables. Never use mercury or liquid thermometers to measure the temperature of the food.
- Foods heated with microwaves give off heat to the cookware. **Use oven gloves or something similar** .
- Do not overcook the dishes by using powers and times that are too high. The food can dry out, burn or set itself alight in certain places.
- The interior of the oven, the grill heating element and the accessories become hot when the appliance is operating. Please be careful when handling them and use oven gloves or similar for this reason. **Risk of burns!**
- Metal objects must be at least 2 cm from the walls of the oven interior and the oven door. Otherwise spark discharges may be caused and the appliance can be damaged.
- If not advised otherwise, do not use aluminium foil.
- Do not get anything caught between the door and the door frame.
- Always keep the door seal, the door seal surfaces and the interior clean. Lack of cleanliness in the appliance can lead to dangerous situations.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place a baking tray or saucepan etc. on the floor, as otherwise the oven enamel will be damaged by the heat build-up.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to and discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could cause damage to the enamel.
- Do not leave dishes uncovered in the oven after switching off the cooling fan. Moisture may form inside the oven or on the glass door and also get onto the units.

Downloaded From Microwave-Manual.com Manuals

Information on the oven enamel Changes to the colour of the oven's enamel surface as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in terms of warranty law.

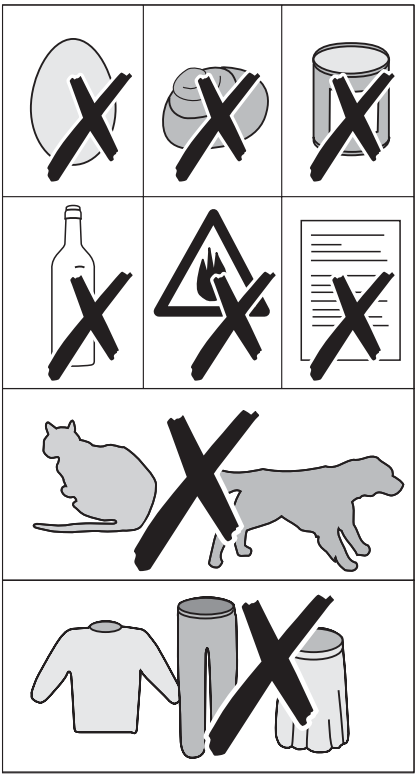

Do not use the appliance...

... for cooking eggs in their shells (with fried eggs, pierce the yolks first) and snails, as it causes these items to burst.
... for heating large amounts of cooking oil (fondue, deep frying) and drinks with high alcohol content: **Spontaneous ignition! Risk of explosion!**
... for heating tightly closed containers, e.g. tins, bottles, screw top jars.
... for drying animals, textiles, grain pillows and gel cushions and other flammable materials: **Risk of fire!**
... for cookware made of porcelain, ceramic or earthenware that has small holes, e.g. on handles or unglazed bottoms. Moisture penetrating holes can cause the cookware to crack when it is heated.

Downloaded From Microwave-Manual.com Manuals

Description of the Appliance

General Overview

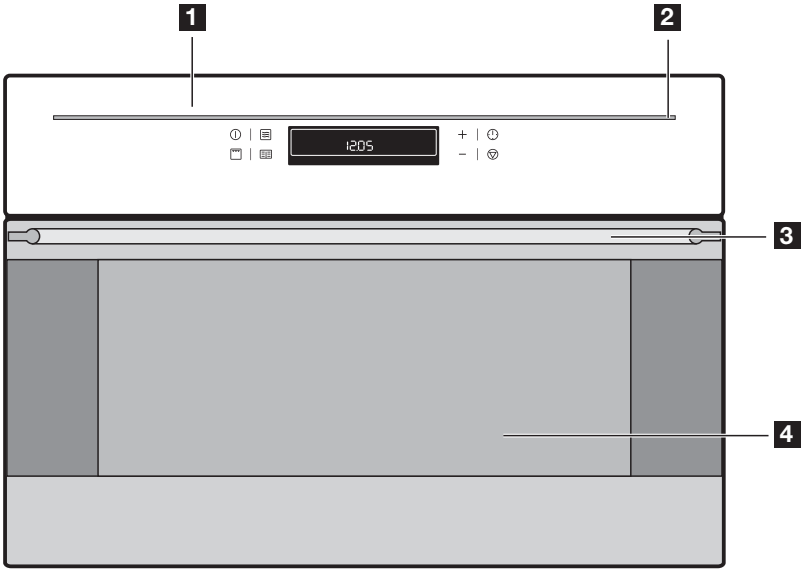

1 Control panel
2 Light bar
3 Door handle
4 Oven door

If no function is selected and nothing is changed on the appliance, the appliance switches itself off after 2 minutes, but the light bar remains on.

To switch the light bar off, switch the appliance on using the Start ◇ button and switch it off again using the Stop ▽ button (press twice).

Downloaded From Microwave-Manual.com Manuals

Control Panel

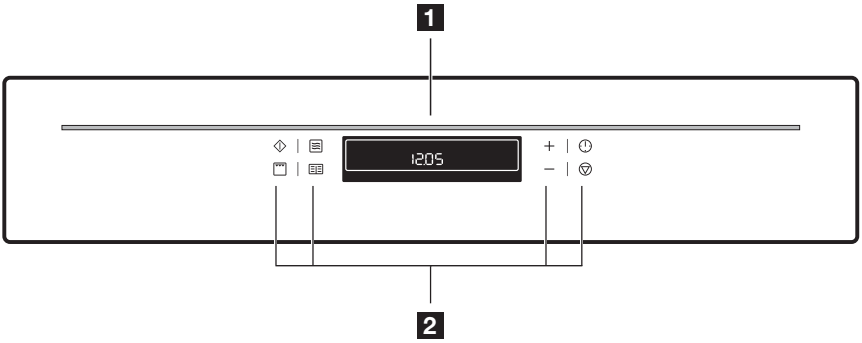

1 Oven display
2 Function buttons Oven

Downloaded From Microwave-Manual.com Manuals

Oven Features

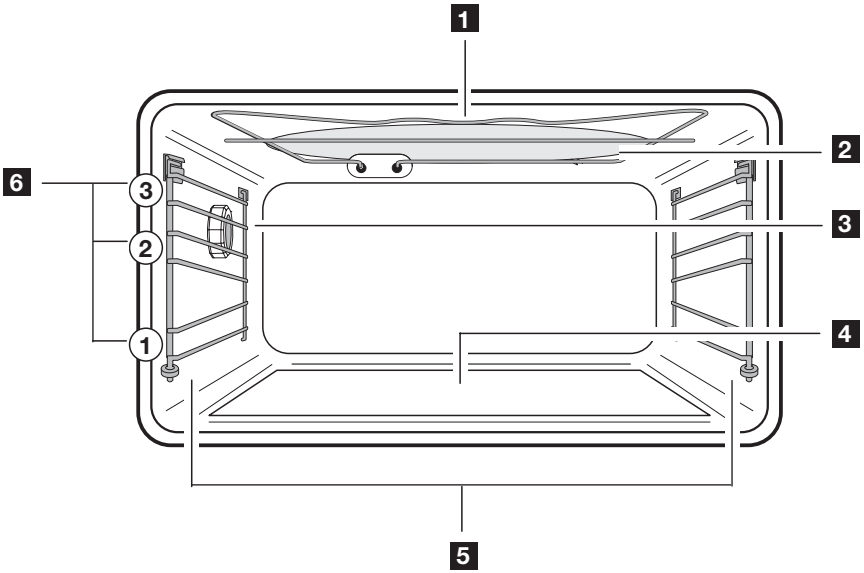

1 Grill heating element
2 Microwave generator
3 Oven lighting
4 Glass floor, removable
5 Oven shelf runners, removable
6 Shelf positions

Oven accessories

Oven shelf
For cookware, cake tins, roasts and grilled foods.

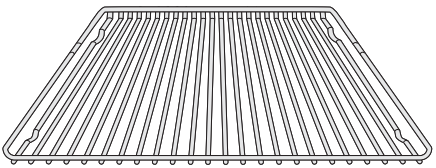

Crunch plate

Downloaded From Microwave-Manual.com Manuals

(non scratch and cut resistant)

Before using for the first time

Setting and changing the time

The oven only operates when the time has been set.

When the appliance has been connected to the electrical supply or when there has been a power cut, the symbol for Time automatically flashes.

1. To change a time of day that has already been set, press the Clock Functions button repeatedly until the symbol for Time flashes.
2. Using the + or — button, set the current time.

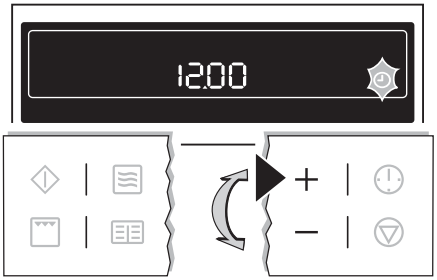

After about 5 seconds, the flashing stops and the clock displays the time of day set.

The appliance is now ready to use.

Downloaded From Microwave-Manual.com Manuals

The time can only be modified, if the child safety device is deactivated, none of the clock functions Countdown , Cook time or End time nor any oven functions are set.

Cleaning for the first time

Before you use the oven for the first time, you should clean it thoroughly.

Do not use any sharp or abrasive cleaning tools or materials! These could damage the surface.

For metal fronts, use normal commercially available cleaning agents.

1. Open the oven door.
   The lighting in the oven is switched on.
2. Remove all accessories and side rails and clean with a warm solution of water and washing-up liquid.
3. Also wipe the oven out with a warm solution of water and washing-up liquid and then dry it.
4. Wipe the front of the appliance with a damp cloth.

Getting to know the appliance

The appliance can be operated in test mode for testing or performing all operating steps. The oven does not heat up.

Switching test mode on

1. the appliance using the Stop **switch off.** button.
2. Press and hold Baking/Roasting Programmes and + buttons at the same time until an acoustic signal sounds and **“d”** lights up in the display.

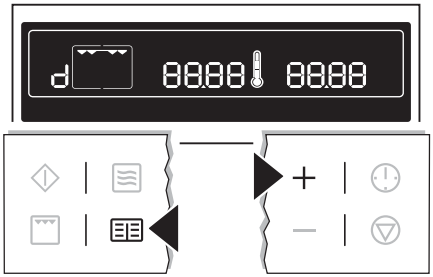

Switching test mode off

1. the appliance using the Stop **switch off.** button.
2. Press and hold Baking/Roasting Programmes and + buttons at the same time, until a signal sounds and **“d”** goes out in the display.

Downloaded From Microwave-Manual.com Manuals

Using the Oven

The Electronic Oven Control

The display field

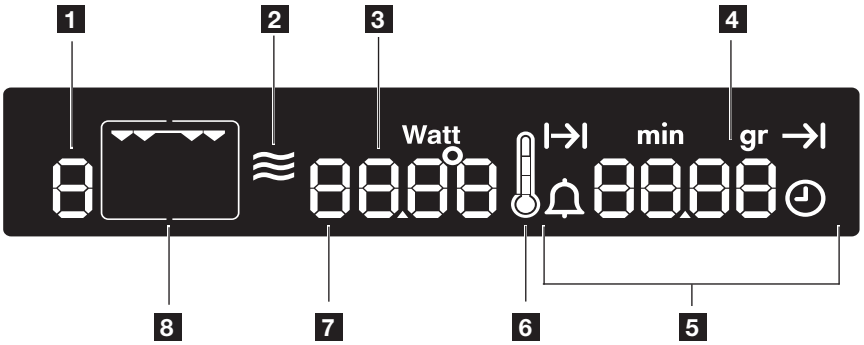

1 Memory: P / Test: d
2 Microwave function
3 Temperature/Time/Microwave Power
4 Weight display
5 Clock functions Period of operation
6 Thermometer symbol
7 Baking/roasting programmes
8 Oven Functions

Downloaded From Microwave-Manual.com Manuals

The control panel

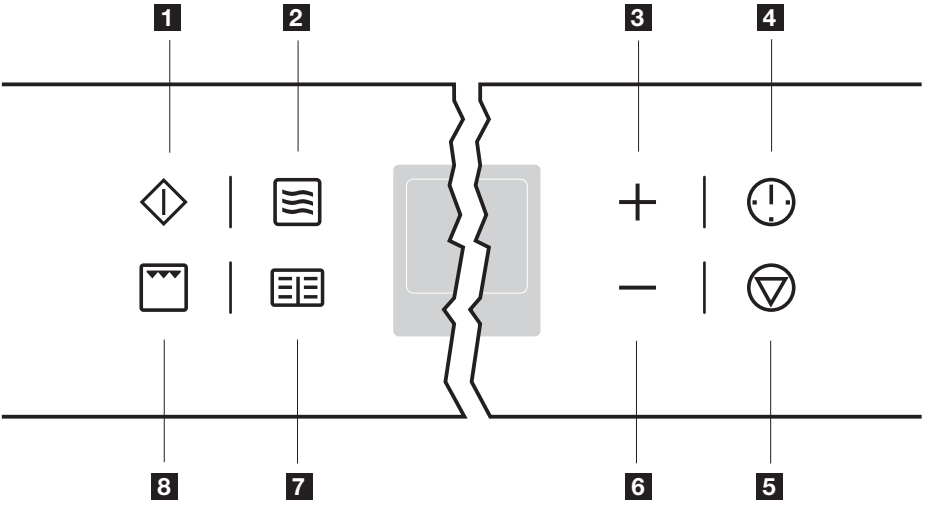

1 Start button
2 Microwave button
3 Button +
4 Clock Functions
5 Stop button/ Reset
6 Button —
7 Baking/roasting programmes
8 Grill Function button

General instructions

- Always confirm the selected function with the Start ◇ button.
- When the selected function is started, the oven begins to heat up or the time set begins to count down.
- If the oven door is opened during operation, the function stops. After closing the door continue with the Start ◇ button. If the Start ◇ button is not pressed within 120 seconds, the appliance switches off.

Downloaded From Microwave-Manual.com Manuals

- The oven light is switched on as long as an oven function is started or the oven door is open.
  The oven light goes off after 10 minutes when the door is open and the appliance switched off.
- Stop operation with the Stop ⏚ button, continue with the Start ⏀ button. Switch the appliance off by pressing the Stop ⏚ button again.

Switching the oven on

1. Press the grill button. The oven function Grill appears.

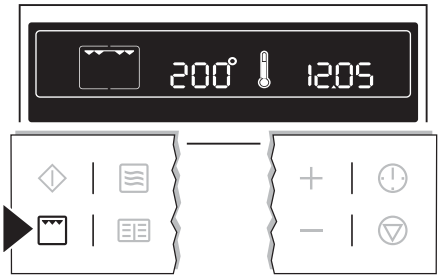

   A suggested temperature appears in the temperature display.
2. Press the Start ⏀ button to start the oven function Grill .

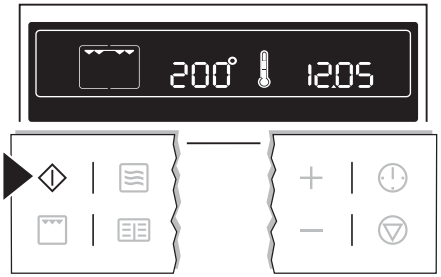

Changing the core temperature

Press the + or — button to raise or lower the temperature.
The setting changes in steps of 5°C.

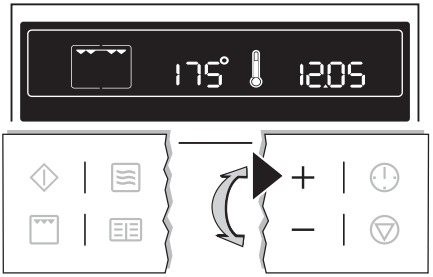

Thermometer symbol

- The slowly rising thermometer symbol indicates how far the oven has heated up.
- When the selected temperature is reached, an audible signal sounds.

Switching the oven off

To switch the oven off, press the Stop ⏚ button repeatedly until only the time and any residual heat is displayed.

Downloaded From Microwave-Manual.com Manuals

Cooling fan
The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

Oven function		Application
	Grill	For **grilling** flat foodstuffs and for **toasting** .
	Microwave	For **heating** ready meals and drinks, for **defrosting** meat or fruit and for **cooking** vegetables and fish.
	Combi Function	For the style of heating for the oven function(s), the function **Microwave** can be switched on. The dishes are cooked in the shortest time and browned at the same time.
	Microwave Quick Start	Quick Start of the maximum microwave power when the appliance is switched off using the Start button. Operating time from 30 seconds to 7 minutes. Each press of the button adds 30 seconds to the operating time displayed.

Microwave

1. If necessary, switch off the appliance using the Stop button.
2. By repeatedly pressing the Microwave button, set the desired microwave power.

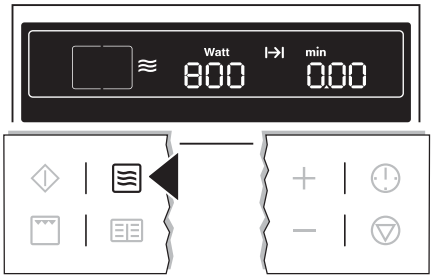

– The settings options are in 100 Watt steps from 1,000 Watt to 100 Watt.

Downloaded From Microwave-Manual.com Manuals

– Repeatedly pressing the Microwave button makes the power display begin again at 1,000 Watt.

3. Using the + or — button set the desired cook time. The symbol for Cook time flashes.

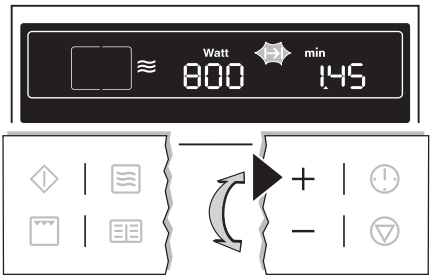

– The cooking times can be set as follows:
  – from 0 to 2 mins. in 5 second steps,
  – from 2 to 5 mins. in 10 second steps,
  – from 5 to 10 mins. in 20 second steps,
  – from 10 to 20 mins. in 30 second steps,
  – from 20 mins. onwards in 1 minute steps.
– The maximum length of operation that can be set is:
  – At 700 Watt to 1,000 Watt 0 to 7 minutes 40 seconds,
  – at 100 Watt to 600 Watt 0 to 59 minutes.

4. When the Start button is pressed, the time set begins to count down. The symbol for Cook time lights up.

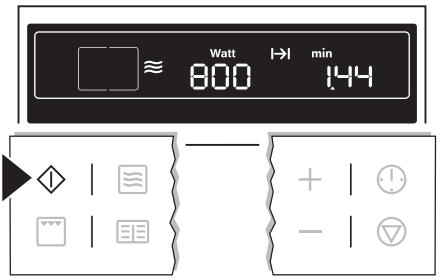

– While the time counts down, the power can be changed using the Microwave button.
– While the time counts down, using the Clock Functions and + buttons the cooking time can be increased or — reduced.

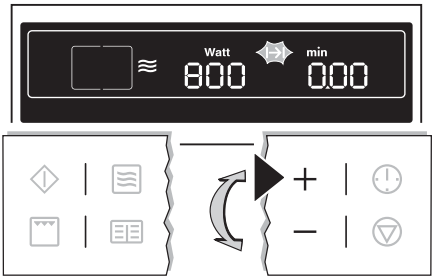

When the time has elapsed, an acoustic signal sounds for 2 minutes. The microwave switches itself off. The symbol for Cook time flashes and the time display appears.
To turn off the acoustic signal: Press any button.

Combi Function

1. If necessary, switch off the appliance using the Stop button.
2. Press the grill button. The oven function Grill appears.

Downloaded From Microwave-Manual.com Manuals

3. Using the + or — button set the desired temperature.

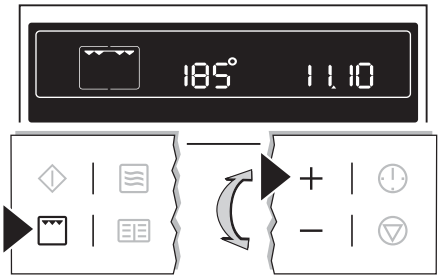

4. By repeatedly pressing the Microwave button, set the desired microwave power (max. 600 Watt).
5. Using the + or — button set the desired cook time. The symbol for Cook time flashes.

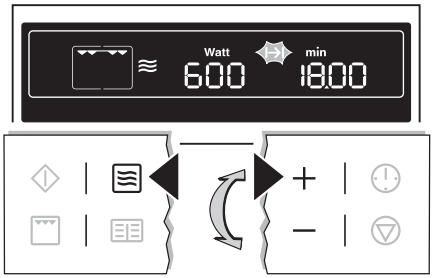

– The cooking times can be set as follows:
  – from 0 to 2 mins. in 5 second steps,
  – from 2 to 5 mins. in 10 second steps,
  – from 5 to 10 mins. in 20 second steps,
  – from 10 to 20 mins. in 30 second steps,
  – from 20 mins. onwards in 1 minute steps.

  The maximum length of operation that can be set is 59 mins.
6. When the Start button is pressed, the time set begins to count down. Oven and microwave are on. The symbol for Cook time lights up.

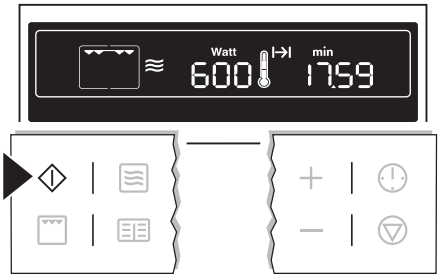

– While the time counts down, the power can be changed using the Microwave button.
– While the time counts down, using the Clock Functions and + buttons the cook time can be increased or — reduced.

When the time has elapsed, an acoustic signal sounds for 2 minutes. The appliance switches itself off. The symbol for Cook time flashes and the time display appears.
To turn off the acoustic signal: Press any button.

Downloaded From Microwave-Manual.com Manuals

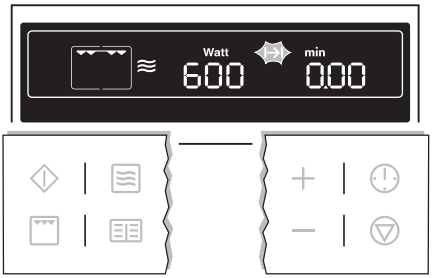

Microwave Quick Start

1. If necessary, switch off the appliance using the Stop ⏚ button.
2. Press the Start ⏀ button repeatedly until the desired period of operation appears. The appliance switches itself on at maximum microwave power.

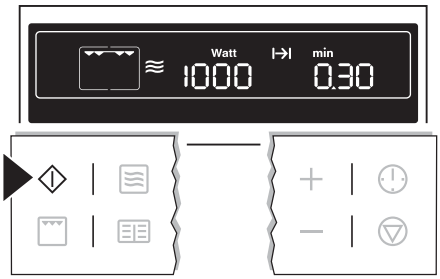

– Each press of the button adds 30 seconds to the period displayed. Maximum of 7 mins. with maximum microwave power.
– While the time counts down, using the Clock Functions ⏲ and + buttons the cooking time can be increased or — reduced.
– By repeatedly pressing the Microwave ≋ button, the microwave power can be changed.
– By pressing the Stop ⏚ button once, operation can be interrupted. Continue operation using the Start ⏀ button. Pressing the Stop ⏚ button twice switches the appliance off.

When the time has elapsed, an acoustic signal sounds for 2 minutes. The appliance switches itself off. The symbol for Cook time flashes and the clock display appears.
To turn off the acoustic signal: Press any button.

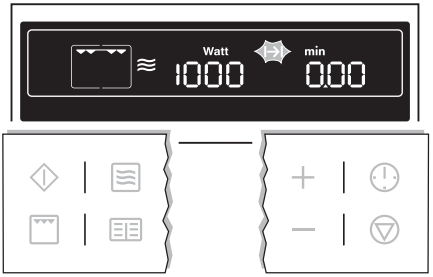

Information on power settings

The overview indicates at which power setting certain processes can be performed. The powers given are guidelines.

Downloaded From Microwave-Manual.com Manuals

Microwave power	Suitable for
1,000 Watt **900 Watt** **800 Watt** **700 Watt**	• Heating liquids • Searing at the beginning of a cooking process • Cooking vegetables • Cooking foodstuffs • Melting gelatine and butter
600 Watt **500 Watt**	• Defrosting and heating frozen meals • Heating one-plate meals • Simmering stews • Cooking egg dishes
400 Watt **300 Watt** **200 Watt**	• Continuing to cook meals • Cooking delicate foodstuffs • Heating baby food • Simmering rice • Heating delicate foods • Melting cheese
100 Watt	• Defrosting meat, fish, bread • Defrosting cheese, cream, butter • Defrosting fruit and cakes (gateaux) • Raising yeast dough • Warming up cold dishes and drinks

Inserting the grill

Shelf runner safety and anti-tip device

As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge.
Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.

Inserting the grill:
Insert the grill so that the feet point downwards.
Push the grill between the guide bars of the selected oven level.

Downloaded From Microwave-Manual.com Manuals

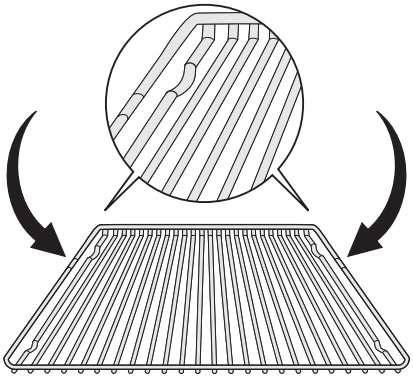

The high rim around the grill is an additional device to prevent cookware from slipping.

Additional functions

Microwave Programmes

For this function, use the pre-set programmes (see chapter Uses, Tables and Tips: Programmes).

1. If necessary, switch off appliance using the Stop ▽ **switch off** button.
2. By repeatedly pressing the Recipes 🕮 button, select the desired programme (P 1 to P10).

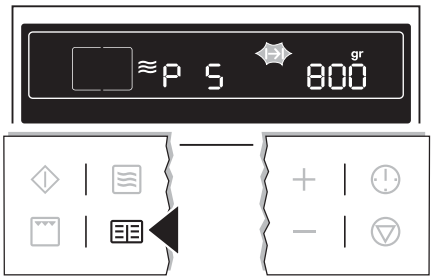

– In the display the preset weight **"gr"** is displayed. The symbol for Cook time |→| flashes. **Weight = Cook time**

3. By pressing the + or — button, the weight display can be adapted to the weight of the food, minimum 100 g, maximum 1,500 g (P 5 to P10 maximum 1,000 g).

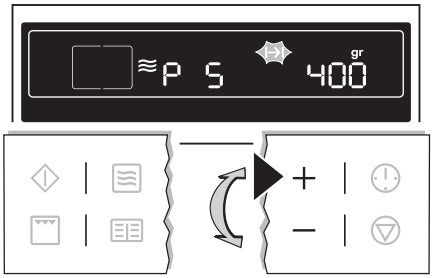

– Inputting the weight automatically controls the length of time the microwave operates.
– Always input the lower weight, e. g. a loaf weighs 460 g: Set the weight to 400 g.

4. When the Start ◇ button is pressed, the time set begins to count down. The symbols for Cook time |→| and **"min"** light up.

Downloaded From Microwave-Manual.com Manuals

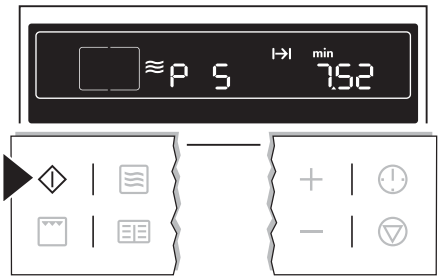

– When the time has elapsed, an acoustic signal sounds for 2 minutes. The oven switches itself off. The symbol for Cook time |→| flashes.

With some programmes, after the time has elapsed a Keep Warm function is started. A signal sounds and in the display “HH” lights up.

After the Keep Warm function has ended, the signal sounds for 2 minutes. The oven switches itself off. The symbol for Cook time |→| flashes and the time display appears.

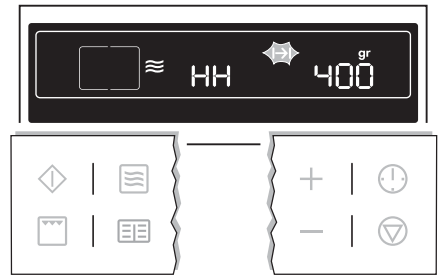

To turn off the acoustic signal: Press any button.

Memory Function

The Memory Function can be used to save **one** setting which is used very frequently.

1. Set oven function, temperature and, if necessary the clock functions Cook time |→| and/or End time →| or set microwave power and Cook time |→| .
2. Press and hold the Recipes button for approx. 2 seconds, until an acoustic signal sounds. The setting is saved.

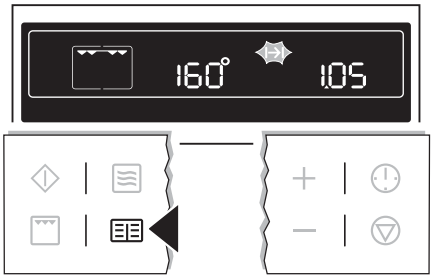

3. Continue by pressing the Start button or switch the appliance off using the Stop button.

To save another setting, press the Recipes button again for approx. 2 seconds. The previously saved setting is replaced by the new one.

Starting the Memory Function

1. If necessary, switch off the appliance using the Stop button.
2. Using the Recipes button, call up the saved setting.

Downloaded From Microwave-Manual.com Manuals

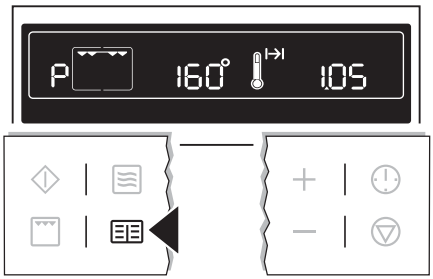

3. Press the Start ◇ button.

Clock Functions

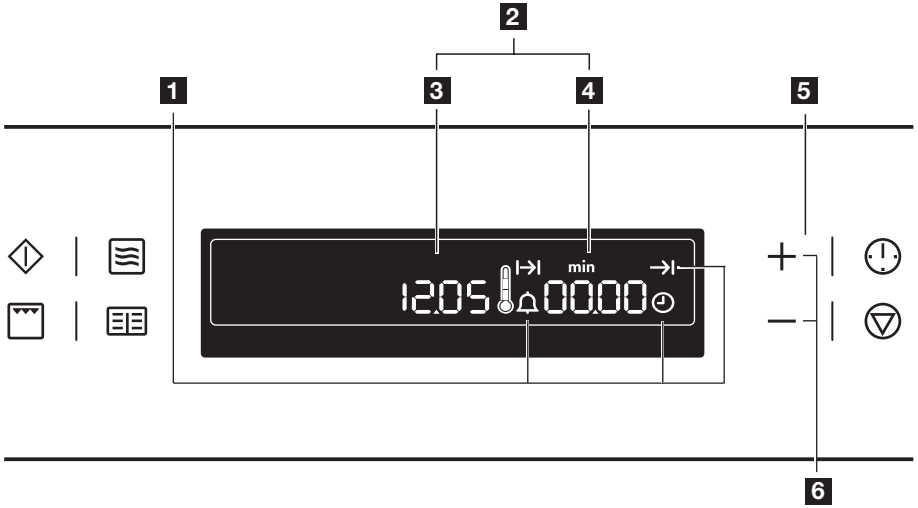

1 Clock Functions
2 Time display
3 Clock
4 Cook time/End time/Operating time
5 Clock Functions
6 Settings buttons

Countdown 🔔
To set a countdown. When it has counted down, an audible signal sounds. This function has no effect on the operation of the microwave and oven.

Microwave cook time |→| min

Downloaded From Microwave-Manual.com Manuals

For setting how long the oven is to operate.

Cook time |→|

To set how long the oven is to be in use.

End time →|

To set when the oven is to switch off again.

Time 🕘

To set, change or check the time (See also section “Before Using for the First Time”).

General instructions

- After a clock function has been selected, the corresponding symbol flashes for about 5 seconds. During this time, the desired times can be set or modified using the + or — button.
- When the desired time has been set, the symbol continues to flash for approx. 5 seconds. After this the symbol lights up. The set Countdown 🔔 begins to count down.
- The time set for Cook time |→| and End time →| begins to count down after the selected function starts.

Countdown 🔔

1. Press the Clock Functions 🕘 button repeatedly until the symbol for Countdown 🔔 flashes.

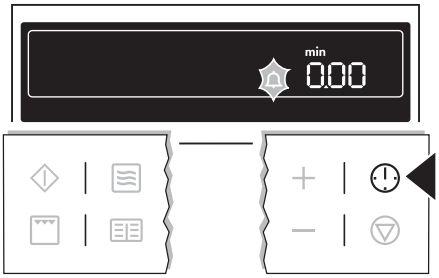

2. Using the + or — buttons, set the desired countdown (max. 99.00 minutes).

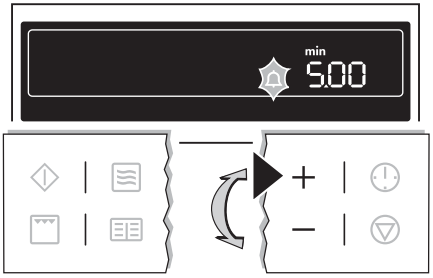

After about 5 seconds the display shows the time remaining. The symbol for Countdown 🔔 lights up.

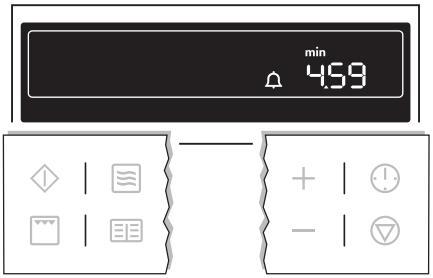

When the time set has elapsed, an acoustic signal sounds for 2 minutes. “0.00” lights up and the symbol for Countdown 🔔 flashes.

Downloaded From Microwave-Manual.com Manuals

To turn off the acoustic signal: Press any button.

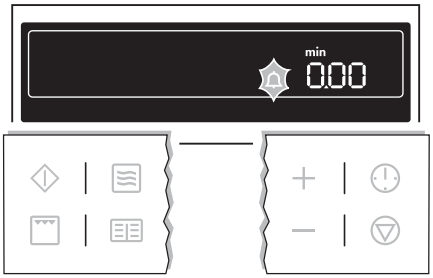

Microwave cook time ⟼| min

1. Select microwave function and set the power by repeatedly pressing the Microwave ≋ button.

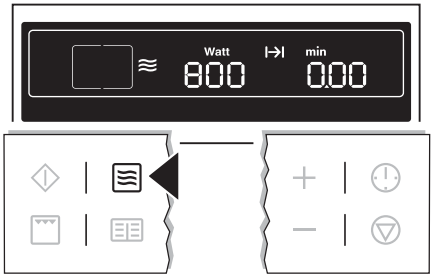

2. Using the + or — button, set the desired cooking time. The symbol for Cook time ⟼| flashes.

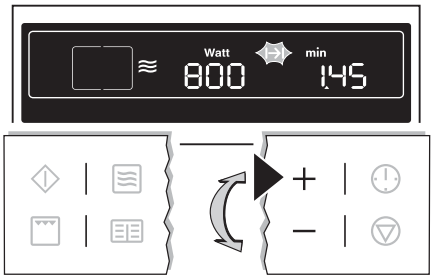

3. When the Start ◇ button is pressed, the time set begins to count down. The symbol for Cook time ⟼| lights up.

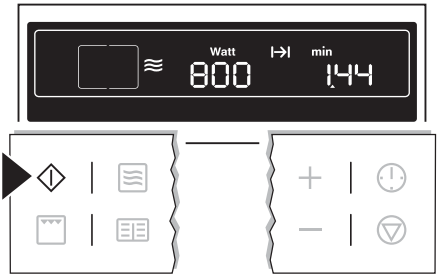

By repeatedly pressing the Clock Functions ⏲ button, the current time can be called up. While the time counts down, using the ⏲ and + buttons the cook time can be increased or — reduced.

When the time has elapsed, an acoustic signal sounds for 2 minutes. The microwave switches itself off.
“0.00” is displayed and the symbol for Cook time ⟼| flashes.
To turn off the acoustic signal: Press any button.

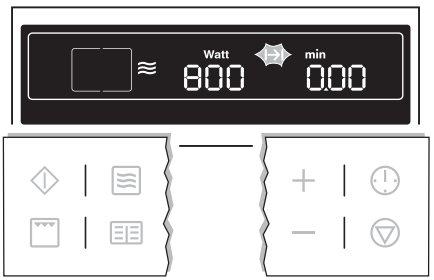

Downloaded From Microwave-Manual.com Manuals

Cook time |→|

1. Select oven function and temperature using the + or — button.
2. Press the Clock Functions button repeatedly until the symbol for Cook time |→| flashes.

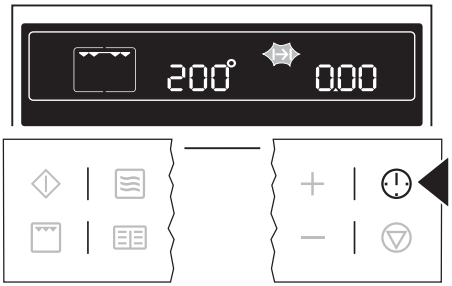

3. Using the + or — button, set the desired cooking time.

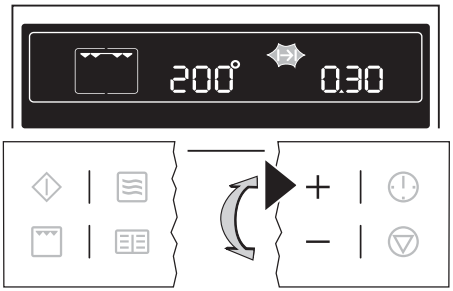

4. When the Start button is pressed, the time set begins to count down. The symbol for Cook time |→| lights up.

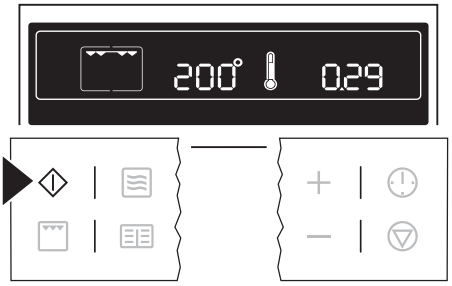

By repeatedly pressing the Clock Functions button, the current time can be called up.

When the time has elapsed, an acoustic signal sounds for 2 minutes. The oven switches itself off.
"0.00" is displayed and the symbol for Cook time |→| flashes.
To turn off the acoustic signal: Press any button.

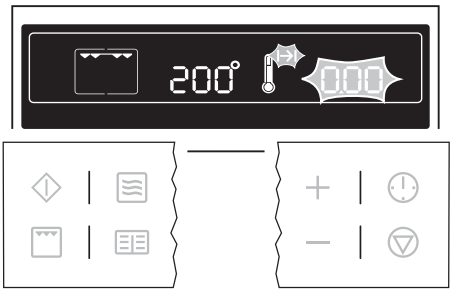

End time →|

1. Select oven function and temperature using the + or — button.
2. Press the Clock Functions button repeatedly until the symbol for End time →| flashes.

Downloaded From Microwave-Manual.com Manuals

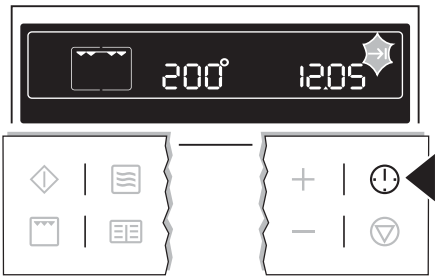

3. Using the + or — button, set the desired switch-off time.

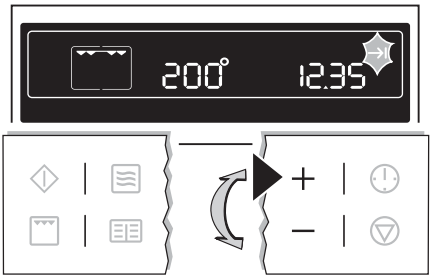

The symbols for End time →| and Cook time |→| light up.
The oven switches itself off automatically.

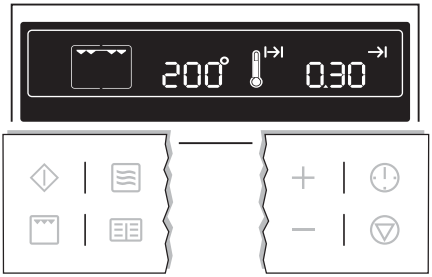

By repeatedly pressing the Clock Functions button, the current time can be called up.

When the time has elapsed, an acoustic signal sounds for 2 minutes. The oven switches itself off.
“0.00” is displayed and the symbols for End time →| and Cook time |→| flash.
To turn off the acoustic signal: Press any button.

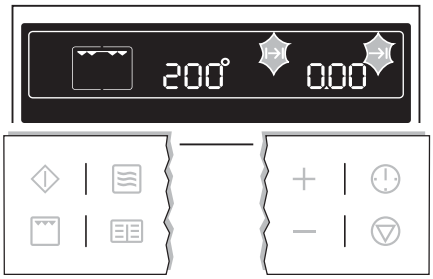

Cook time |→| and End time →| combined

Cook time |→| and End time →| can be used simultaneously, if the oven is to be switched on and off automatically at a later time.

1. Select oven function and temperature.
2. Using the Cook time |→| function, set the time required for cooking the dish.
   e.g. 1 hour.

Downloaded From Microwave-Manual.com Manuals

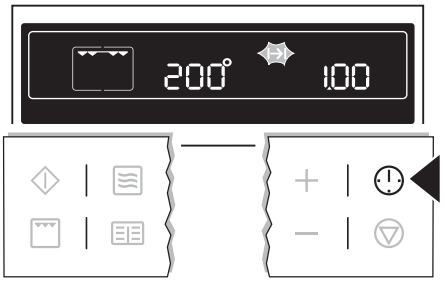

3. Using the End time →| function, set the time at which the dish is to be ready.
   e.g. at 14:05.

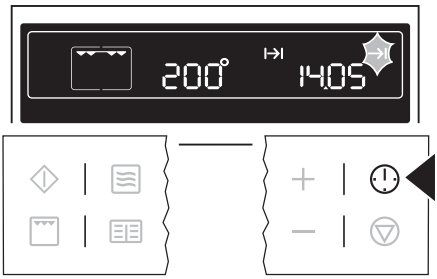

The symbols for Cook time |→| and End time →| light up.
The oven switches on automatically at the time calculated. e.g. at 13:05.
When the set cooking time has elapsed, an acoustic signal sounds for 2 minutes and the oven switches itself off. e.g. at 14:05.

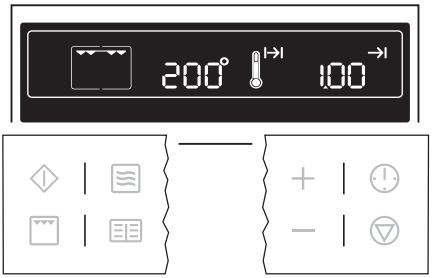

Other functions

Switching off the display

You can save energy by switching off the display.

Switching off the display

1. If necessary, switch off the appliance using the Stop ▽ **switch off** button. Residual heat must not be displayed.
2. Press buttons Clock Functions ⏲ and — at the same time until the display goes out.

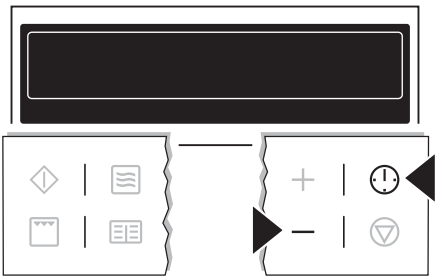

Downloaded From Microwave-Manual.com Manuals

As soon as the appliance is switched on again, the display automatically switches itself on. When the appliance is next switched off, the display goes out again.
To have the time permanently displayed again, you must switch the display on again.

Switching on the display

1. If necessary, switch off the appliance using the Stop ⏻ **switch off** button.
2. Press buttons Clock Functions 🕒 and — at the same time until the display comes on again.

Child safety device

As soon as the child safety device is activated, it is no longer possible to operate the appliance.

Activating the child safety device

1. If necessary, switch off the appliance using the Stop ⏻ **switch off. No oven function may be selected.** button. An oven function must not be selected.
2. Press Recipes 📖 and — buttons at the same time until SAFE appears in the display.

The child safety device is now activated.

Deactivating the child safety device

1. If necessary, switch off appliance using the Stop ⏻ button.
2. Press Recipes 📖 and — buttons at the same time until SAFE goes out in the display.

The child safety device is now deactivated and the appliance is again ready for use.

Button beep

Switching off button beep

1. If necessary, switch off appliance using the Stop ⏻ **switch off** button.
2. Press and hold + and — buttons at the same time until a signal sounds (approx. 2 seconds).

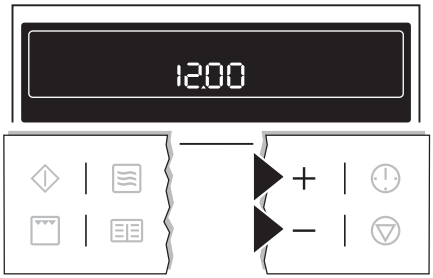

The button beep is now switched off.

Switching on button beep

Downloaded From Microwave-Manual.com Manuals

Press + and — hold and buttons at the same time until a signal sounds (approx. 2 seconds).
The button beep is switched on again.

Oven safety cut-out

If not switched off after a certain time, or if the temperature is not modified, the oven switches off automatically.
The last temperature set flashes in the temperature display.

The oven switches itself off at an oven temperature of:
30 - 120°C after 12.5 hours
120 - 200°C after 8.5 hours
200 - 230°C after 5.5 hours
OFF appears in the display.
Using the appliance after a safety cut-out
Switch the oven off completely. It can then be switched on again.

Uses, Tables and Tips

Grill

Oven function: Grill with maximum temperature setting

Always grill with the oven door closed.

Grilling table

- For grilling, use both the shelf and the tray together.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Rissoles	3	12-15 mins.	9 - 12 Min.
Pork fillet	2	10-12 mins.	6-10 mins.
Sausages	3	12-16 mins.	8 - 10 Min.
Fillet steaks, veal steaks	3	12 - 15 Min.	8 - 12 Min.
Toast [1)]	3	6 - 8 mins.	3-5 mins.

Downloaded From Microwave-Manual.com Manuals

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Toast with topping	2	8-10 mins.	---

1) Use the grill shelf without a tray

Microwave

Information about operation

General

- After switching off the appliance, let the food stand for a few minutes (see Microwave Tables: Standing Time).
- Remove aluminium foil packaging, metal containers, etc. before preparing the food.

Cooking

- If possible, cook food covered with material suitable for use in the microwave. Only cook food uncovered, if a crust is to be kept.
- Chilled or frozen foods require a longer cooking time.
- Dishes containing sauce should be stirred from time to time.
- Vegetables that have a firm structure, such as carrots, peas or cauliflower, should be cooked in water.
- Turn larger pieces about halfway through the cooking time.
- If possible, cut vegetables into similar sized pieces.
- Use flat, wide dishes.

Defrosting meat, poultry, fish

- Place the frozen, unwrapped food on a small upturned plate with a container underneath or on a defrosting rack or plastic sieve so that the defrosting liquid can run off.
- Turn the food after half the defrosting time. If possible, divide, remove pieces that have started to defrost.

Defrosting butter, portions of gateau, quark

- Do not defrost completely in the appliance, but leave to defrost at room temperature. This gives a more even result. Remove any metal or aluminium packaging or parts before defrosting completely.

Defrosting fruit, vegetables

- Do not completely defrost fruit and vegetables, which are to be further prepared while still raw, in the appliance, but at room temperature.
- Fruit and vegetables that are to be cooked, can be cooked directly using a higher microwave power, without being defrosted.

Ready Meals

- Ready meals in metal packaging or plastic trays with metal covers may only be defrosted or heated in the microwave if these are expressively designated as suitable for use in the microwave.
- You must follow the manufacturer's instructions printed on the packaging (e. g. remove metal cover and pierce plastic film).

Downloaded From Microwave-Manual.com Manuals

Suitable cookware and materials

Cookware/Material	Microwave			Oven Grill
	Defrost-ing	Heat-ing	Cook-ing	
Ovenproof glass and porcelain (with no metal components, e. g. Pyrex, heatproof glass)	X	X	X	X
Non-ovenproof glass and porce-lain[1)]	X	--	--	--
Glass and glass ceramic made of ovenproof/ frostproof material (e. g. g. Arcoflam), grill shelf	X	X	X	X
Ceramic[2)], stoneware[2)]	X	X	X	--
Plastic heat-resistant to 200°C[3)]	X	X	X	--
Cardboard, paper	X	--	--	--
Clingfilm	X	--	--	--
Roasting film with microwave safe closure[3)]	X	X	X	--
Roasting dishes made of metal, e.g. enamel, cast iron	--	--	--	X
Baking tins, black lacquer or silicon-coated[3)]	--	--	--	X
Baking tray	--	--	--	X
Browning cookware, e. g. Crostino or Crunch plate	--	X	X	--
Ready meals in packaging[3)]	X	X	X	X

1) with no silver, gold, platinum or metal plating/ decorations
2) Without quartz or metal parts, no metallic glaze
3) Please observe the maximum temperatures quoted by the manufacturer.

X is suitable
-- is not suitable

Other things to think about ...

Downloaded From Microwave-Manual.com Manuals

- Foods have different shapes and qualities. They are prepared in different amounts. Therefore the necessary times and powers for defrosting, heating or cooking are all different. As a rough guide: **Double the amount = Almost double the time**
- When heating with the microwave the heat is produced in the food itself. For this reason all places cannot be heated at the same time. The heated dishes should therefore be stirred or turned, especially in the case of larger amounts of food.
- The **standing time** is given in the tables. Let the food stand, in the appliance or outside it, so that the heat is distributed more evenly.
- You get better results for rice using flat, wide dishes.

Microwave Cooking Table

Dish	Defrost / Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Meat					
Meat generally	500	200	10-12	10-15	Turn halfway through cooking
Steaks	200	200	3-5	5-10	Turn halfway through cooking time, remove defrosted parts
Mixed minced meat	500	200	10-15	10-15	Turn halfway through cooking time, remove defrosted parts
Goulash	500	200	10-15	10-15	Turn halfway through cooking time, remove defrosted parts
Poultry					

Downloaded From Microwave-Manual.com Manuals

Dish	Defrost				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Chicken	1000	200	25-30	10-20	Turn halfway through cooking time, cover defrosted parts with aluminium foil
Chicken breast	100-200	200	3-5	10-15	Turn halfway through cooking time, cover defrosted parts with aluminium foil
Chicken thighs	100-200	200	3-5	10-15	Turn halfway through cooking time, cover defrosted parts with aluminium foil
Duck	2000	200	45-60	20-30	Turn halfway through cooking time, cover defrosted parts with aluminium foil
Fish					
Fish generally	500	100	10-15	15-20	Turn halfway through
Fish fillets	500	100	10-12	15-20	Turn halfway through
Sausage					
Sliced sausage	100	100	2-4	20-40	Turn halfway through
Dairy products					

Downloaded From Microwave-Manual.com Manuals

Dish	Defrost				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Quark	250	100	10-15	25-30	Remove aluminium parts, turn halfway through
Butter	250	100	3-5	15-20	Remove aluminium parts, turn halfway through
Cheese	250	100	3-5	30-60	Remove aluminium parts, turn halfway through
Cream	200	100	7-12	20-30	Remove aluminium top, stir halfway through
Cakes/Pastries/Bread					
Yeast dough	1 piece	100	2-3	15-20	Turn plate halfway through
Cheesecake	1 piece	100	2-4	15-20	Turn plate halfway through
Cake (gateau)	1 piece	100	1-2	15-20	Turn plate halfway through
Dry cake (e. g. pound cake)	1 piece	100	2-4	15-20	Turn plate halfway through
Fruit flan	1 piece	100	1-2	15-20	Turn plate halfway through
Bread	1000	100	15-20	10-15	Turn halfway through
Sliced bread	500	100	8-12	10-15	Turn halfway through

Downloaded From Microwave-Manual.com Manuals

Dish	Defrost				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Bread rolls	4 rolls	100	5-8	5-10	Turn halfway through
Fruit					
Strawberries	300	100	8-12	10-15	Defrost covered, stir halfway through
Plums, cherries, raspberries, blackcurrants, apricots	250	100	8-10	10-15	Defrost covered, stir halfway through
Melting					
Chocolate / Chocolate coating	150	600	2-3	---	Stir halfway through
Butter	100	200	2-4	---	Stir halfway through
Heating					
Baby food in jars	200	300	2-3	---	Stir halfway through Check temperature!
Baby milk (180 ml bottle)	200	1000	0:20-0:40	---	Put spoon in the bottle, stir, Check temperature!
Ready meals	400-500	600	4-6	5	Remove any aluminium covers, turn halfway through

Downloaded From Microwave-Manual.com Manuals

Dish	Defrost				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Frozen ready meals	400-500	400	14-20	5	Remove any aluminium covers, turn halfway through
Milk	1 cup approx. 200ml	1000	1:15-1:45	---	Put spoon in the container
Water	1 cup approx. 200ml	1000	1:30-2	---	Put spoon in the container
Sauce	200 ml	600	1-2	---	Stir halfway through
Soup	300 ml	600	2-4	---	Stir halfway through

Dish	Cooking				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Fish generally	500	500	8-10	---	Cook covered, turn container several times during cooking
Fish fillets	500	500	6-8	---	Cook covered, turn container several times during cooking

Downloaded From Microwave-Manual.com Manuals

Dish	Cooking				
	Microwave				
	Size (g)	Power (Watts)	Cook time (Mins.)	Standing time (Mins.)	Comments
Vegetables, short cooking time, fresh[1)]	500	600	12-16	---	Add approx. 50 ml water, cook covered, stir halfway through
Vegetables, short cooking time, frozen[1)]	500	600	14-18	---	Add approx. 50 ml water, cook covered, stir halfway through
Vegetables, long cooking time, fresh[1)]	500	600	14-20		Add approx. 50 ml water, cook covered, stir halfway through
Vegetables, long cooking time, frozen[1)]	500	600	18-24	---	Add approx. 50 ml water, cook covered, stir halfway through
Boiled potatoes	800 g + 600 ml	1000	5-7	300 W / 15- 20	Cook covered, stir halfway through
Rice	300 g + 600 ml	1000	4-6	---	Cook covered, stir halfway through

1) Cook all vegetables with a cover on the container. The times given are guidelines only and depend upon the type and qualities of the foodstuffs.

Combi-Function Table

Oven Functions: Grill + Microwave

Downloaded From Microwave-Manual.com Manuals

Dish	Bake-ware/ Roasting dishes	Oven func-tion	Temp. in °C	Mi-crow. Watt	Oven level	Time in mins.	Comments
Chicken halves 2 x 600 g	Ovenproof glass dish on oven shelf	+	220	300	2	40	Turn after 20 mins. 5 mins. stand-ing time
Potato gratin 1000 g	Ovenproof glassware on oven shelf	+	200	300	2	40	10 mins. standing time
Roast neck of pork 1,100 g	Ovenproof glassware on oven shelf	+	200	300	1	70	Turn once halfway through 10 min. stand-ing time
Swiss ap-ple tarts	Crunch plate on glass floor, pre-heat with pastry max. 5 mins. / 1000 W, turn once	+	220	400	---	25	Turn half-way through
Frozen cheese-cake , 2 x 70 g	Crunch plate on glass floor, pre-heat max. 4 mins. / 700 W turn 1 once	+	230	200	---	25	Turn half-way through

Downloaded From Microwave-Manual.com Manuals

Dish	Bake-ware/ Roasting dishes	Oven func-tion	Temp. in °C	Mi-crow. Watt	Oven level	Time in mins.	Comments
Frozen toasted sandwich with ham and cheese, 2 x 100 g	Crunch plate on glass base, pre-heat max 4 min. / 700 W, turn once	+	230	200 ---	---	20	Turn half-way through, turn after 15 min
Frozen hambur-ger, 2 x 90 g	Crunch plate on glass base, pre-heat max 4 min. / 700 W, turn once	+	230	300	---	20	Turn half-way through, turn after 12 min
Pizza tief-gekühlt Ø 26cm 320 g	Crunch plate on glass base, pre-heat max 4 min. / 700 W, turn once	+	230	200	---	15	Turn half-way through cooking

The cooking times and temperatures given are guidelines only and depend upon the type and the qualities of the food.

Downloaded From Microwave-Manual.com Manuals

Tips for the microwave

Result	Remedy
You cannot find details for the amount of food prepared.	Look for a similar food. Increase or shorten the length of the cooking times according to the following rule: **Double the amount = almost double the time Half the amount = half the time**
The food has got too dry.	Set shorter cooking time or select lower microwave power.
The food is still not defrosted, hot or cooked after the time has elapsed.	Set longer cooking time or select higher microwave power. Please note that taller dishes need longer.
After the cooking time has elapsed, the food is overheated at the edge but is still not ready in the middle.	Next time select a lower power and a longer time. Stir liquids, e. g. soup, halfway through.

Test dishes in accordance with IEC 60705

(Microwave power 1000 Watt)

The quality and function of microwave appliances are tested by test institutes using special dishes.

Dish	Power Watt	Oven function	Oven level	Cook time Mins.	Standing time Mins.
Egg custard (12.3.1)	300	Glass base	Glass floor	30-40	120
Fatless sponge (12.3.2)	600	Glass base	Glass floor	8-10	
Cooking meat loaf (12.3.3)	500	Glass base	Glass floor	20-22	5
Defrosting mince (13.3.)	100	Glass base	Glass floor	15-20	5

Downloaded From Microwave-Manual.com Manuals

Dish	Power Watt	Oven function	Oven level	Cook time Mins.	Standing time Mins.
Defrosting raspberries (B.2.1)	100	Glass base	Glass floor	11-13	5

Programmes

The appliance has 10 programmed functions, which can be selected one after the other using the Baking/Roasting Programmes button.

For settings, see section Additional Functions: Microwave Programmes.

Programme	Function	Recipe		Weight			Time according to preset-ting	Keep Warm function "HH"
				Pre-set-ting	min.	max.		
P 1	Defrosting	Poultry		1,000 g	100 g	1,500 g	19 min. 40 sec.	No
P 2		Meat		800 g	100 g	1,500 g	17 min. 36 sec.	No
P 3		Fish		1,000 g	100 g	1,500 g	15 min. 20 sec.	No
P 4		Bread		500 g	100 g	1,500 g	6 min.	No
P 5	Boiling	Frozen Vegetables, small + 50 ml water		800 g	100 g	1,000 g	15 min. 44 sec.	Yes

Downloaded From Microwave-Manual.com Manuals

Programme	Function	Recipe		Weight			Time according to preset-ting	Keep Warm function "HH"
				Pre-set-ting	min.	max.		
P 6		Frozen Vegeta-bles, large + 50 ml water		800 g	100 g	1,000 g	22 min. 56 sec.	Yes
P 7		Fresh vegeta-bles, small + 50 ml water		800 g	100 g	1,000 g	24 min.	No
P 8		Fresh vegeta-bles, large + 50 ml water		800 g	100 g	1,000 g	26 min. 40 sec.	No
P 9		Potatoes + 100 ml water		600 g	100 g	1,000 g	17 min. 12 sec.	No
P 10		Fish		1,000 g	100 g	1,000 g	21 min. 40 sec.	Yes

Downloaded From Microwave-Manual.com Manuals

Cleaning and care

For cleaning, the appliance must be switched off and cooled down.

For safety reasons, do not clean the appliance with steam jet or high-pressure cleaning equipment!

Do not use any scouring agents, sharp cleaning tools or scourers.

Do not use any rough, polishing cleaners or sharp metal scrapers to clean the glass that can scratch the surface, as this can cause the glass to break.

The outside of the appliance

- Wipe down the front of the appliance with a soft cloth and a solution of hot water and washing-up liquid.
- For metal fronts, use normal commercially available cleaning agents.
- Please do not use any scouring agents or abrasive sponges.

Oven interior

Clean the oven after every use. This is the easiest way to remove dirt which then cannot burn on.

1. When the oven door is opened, the oven light switches itself on automatically.
2. Wipe out the oven after every use with a solution of washing-up liquid and then dry it.

Remove stubborn dirt with special oven cleaners.

When using oven sprays, please follow the manufacturer's instructions exactly!

Accessories

Wash up all insertable parts (oven shelf, baking tray, side rails, etc.) after each use and dry well. For easier cleaning, leave to soak for a while.

Side rails

The left and right-hand side rails can be removed from the oven, so that the side walls of the oven can be cleaned.

Downloaded From Microwave-Manual.com Manuals

Removing side rails

To remove rails, take hold of them and then raise and lift them out of the mounts.

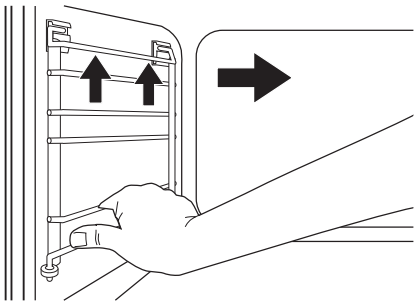

Replacing the side rails

To insert rails, re-insert them into the mounts and lower them.

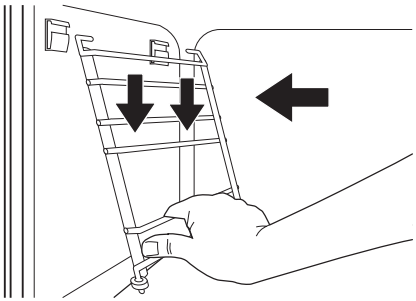

Oven lighting

Risk of electric shock! Before replacing the oven light bulb:

- **Switch oven off.**
- **Take the fuses out of the fuse box or switch off.**

To protect the oven light bulb and the glass cover, lay a cloth on the floor of the oven.

Replacing the side oven light bulb/ Cleaning the glass cover

1. Take out the side rails on the left.
2. Take off the glass cover by turning it anti-clockwise and clean it.

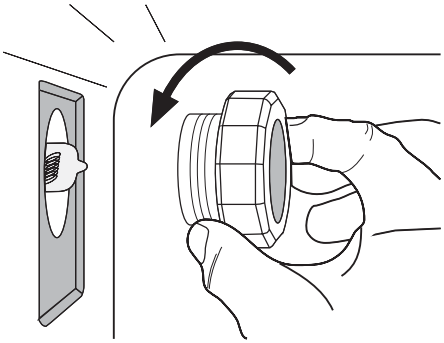

3. If necessary: Replace with halogen oven light bulb 20 Watt, 12 V, 300°C heat-resistant.

Always take hold of the halogen light bulb with a cloth, to avoid burning on grease residues.

4. Re-fit the glass cover.
5. Replace the side rails.

Downloaded From Microwave-Manual.com Manuals

What to do if …

Problem	Possible cause	Remedy
The oven is not heating up	The oven has not been switched on	Switch oven on
	The clock has not been set	Set the current time on the clock
	The required settings have not been made	Check the settings
	The oven's safety cut-out has been triggered	See Safety Cut-out
	The child safety device is activated.	Deactivate child safety device
	The house wiring fuse (in the fuse box) has tripped	Check fuse If the fuses trip several times, please call a qualified electrician
The microwave is not working	The oven door is not properly closed	Close the oven door
	The door seals and door seal surfaces are dirty	Clean door seals and door seal surfaces
	The Start button was not touched	Press the Start button.
The oven lighting is not operating	The oven light bulb is faulty	Replace oven light bulb
"d" is lit in the display and the oven is not heating up Fan not operating	Test mode is switched on	Switch off the appliance Press and hold 🕮 and + buttons at the same time until acoustic signal sounds and indicator goes out

If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.

Downloaded From Microwave-Manual.com Manuals

Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.

If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.

Advice on cookers with metal fronts: Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Installation Instructions

The new appliance may only be installed and connected by a registered installation engineer. Please comply with this instruction. If you do not, any damage resulting is not covered by the warranty.

To prevent future hazards, damaged mains cables must only be replaced by a qualified electrician.

Safety information for the installer

- The set-up of the electrical installation is arranged so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation.
  Suitable separation devices include e. g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- The site must provide a connection to the electrical supply by means of a socket that is accessible and outside the coordination space.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.

Downloaded From Microwave-Manual.com Manuals

1a

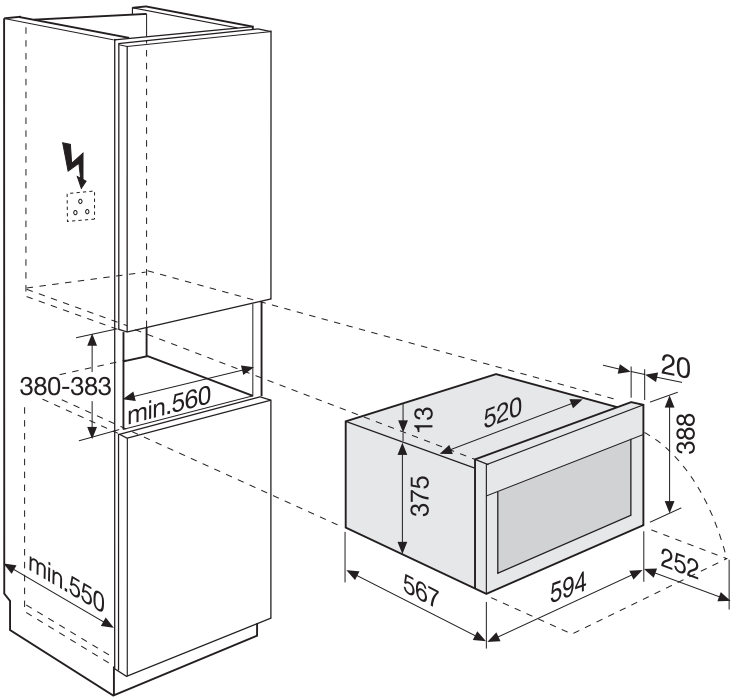

Downloaded From Microwave-Manual.com Manuals

1b

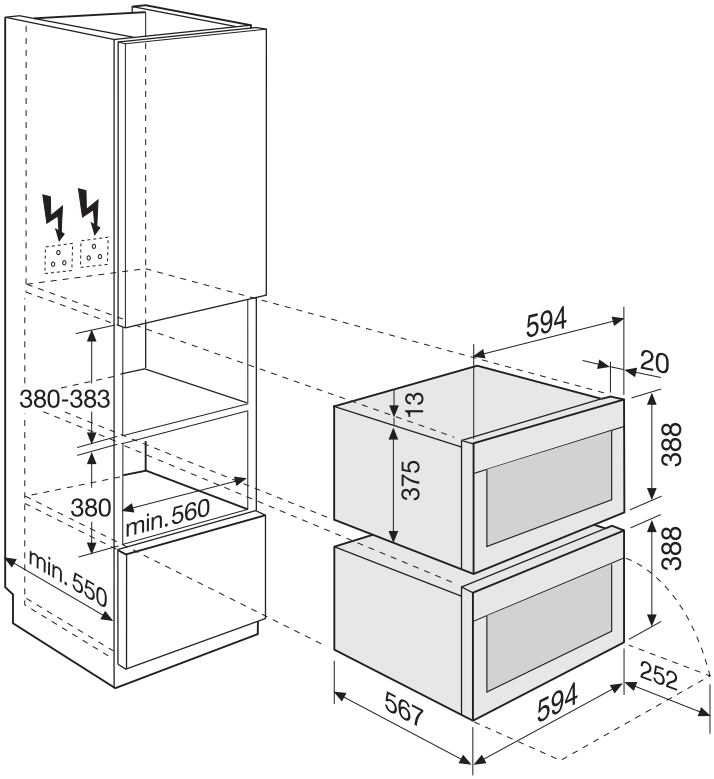

Downloaded From Microwave-Manual.com Manuals

1c

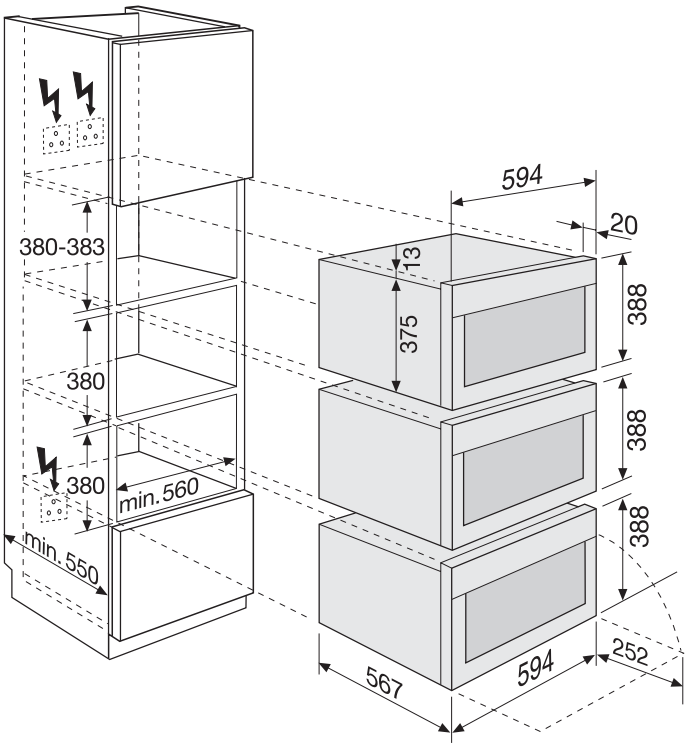

Downloaded From Microwave-Manual.com Manuals

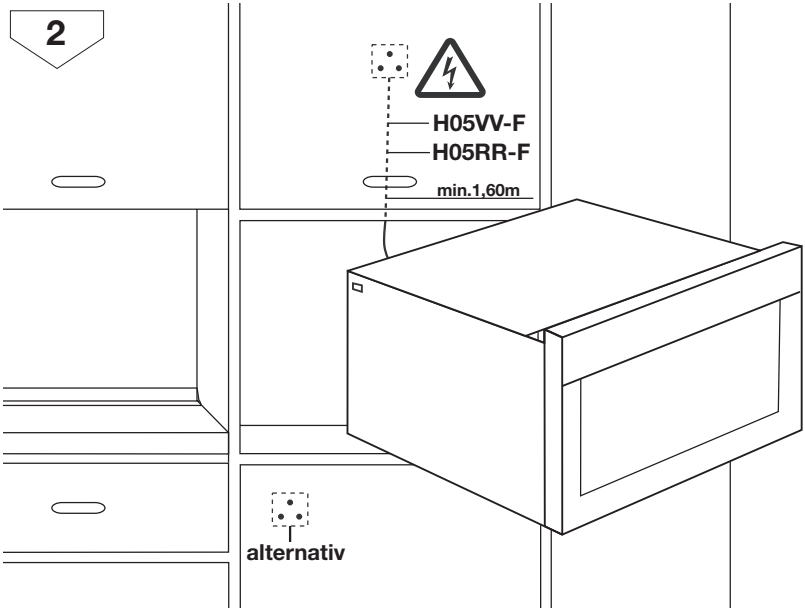

Downloaded From Microwave-Manual.com Manuals

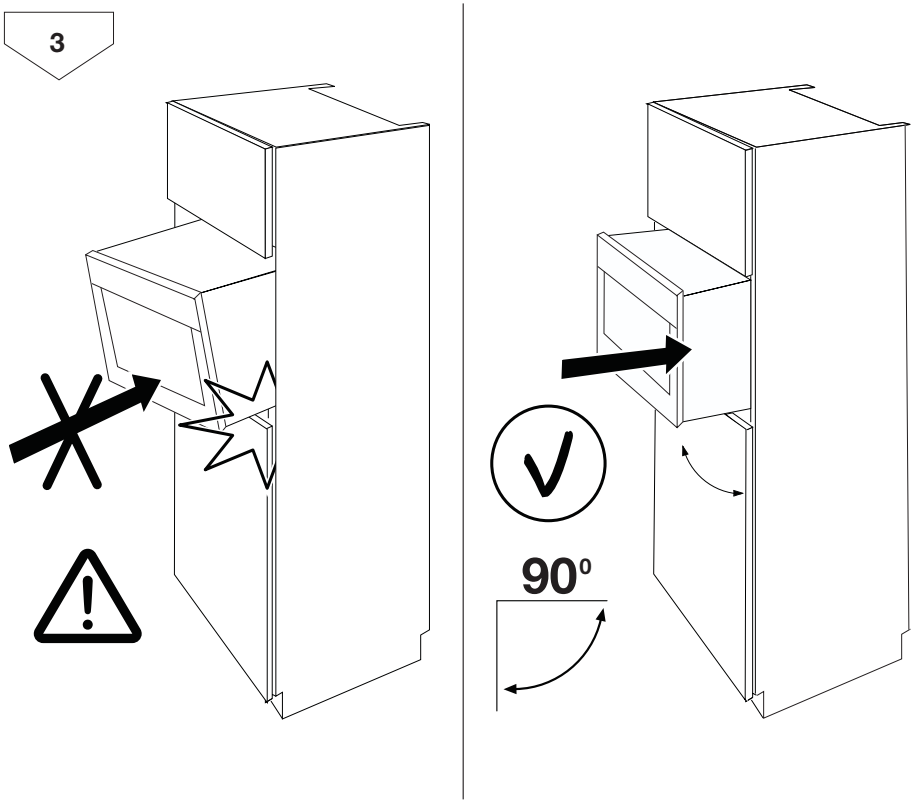

Downloaded From Microwave-Manual.com Manuals

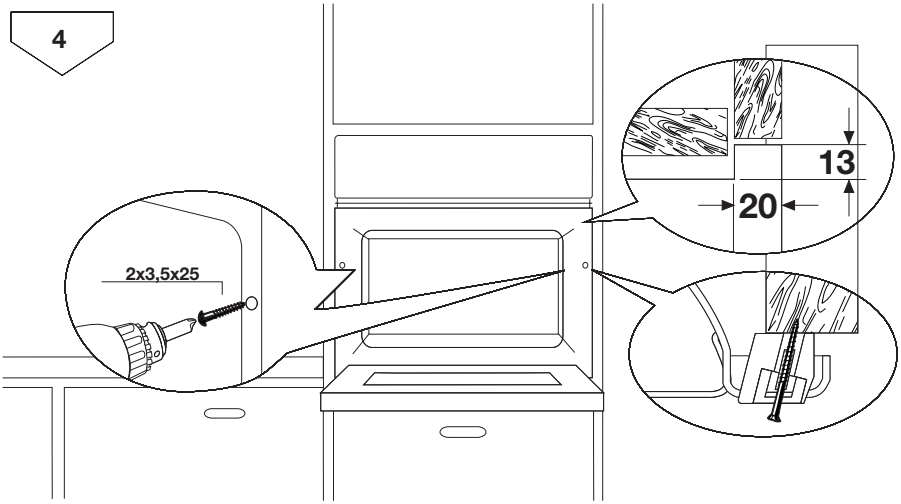

Electrical Connection

The oven is designed to be connected to 230-240V~(50Hz) electricity supply. The oven has an easily accessible terminal block which is marked as follows:
Letter L - Live terminal
Letter N - Neutral terminal
⏚ - Earth terminal

This oven must be earthed!

The cable used to connect the oven to the electrical supply must comply to the specifications given below.
For UK use only

Downloaded From Microwave-Manual.com Manuals

Connection via	Min. size Cable/ flex	Cable/flex type	Fuse
Cooker Control Circuit	2,5 mm²	PVC/PVC twin and earth	min: 15 A max: 20 A

It is necessary that you install a double pole switch between the oven and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current regulations.
The switch must not break the yellow and green earth cable at any point.

After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 50°C above the ambient temperature.
Before the oven is connected, check that the main fuse and the domestic installation can support the load; and that the power supply is properly earthed.

The manufacturer declines any responsibility should these safety measures not be carried out.

Disposal

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging material
The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with international abbreviations such as PE, PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.

Downloaded From Microwave-Manual.com Manuals

Your appliance should be made inoperable before it is disposed of, so that it does not constitute a danger.

To do this, take the mains plug from the socket and remove the mains cable from the appliance.

GB IE Guarantee/Customer Service

GREAT BRITAIN & IRELAND

Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning
0870 5 929 929
Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.
For the address of your local Service Force Centre and further information

Downloaded From Microwave-Manual.com Manuals

about Service Force, please visit the website at
www.serviceforce.co.uk
Before calling out an engineer, please ensure you have read the details under the heading "What to do if..."
When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.
4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk

Customer Care Department, Electrolux Major Appliances
Addington Way, Luton
Bedfordshire, LU4 9QQ

	Tel:
Electrolux	08705 950 950 [1)]
AEG-Electrolux	08705 350 350 [1)]
Zanussi-Electrolux	08705 727 727 [1)]

1) Calls may be recorded for training purposes

For Customer Service in The Republic of Ireland please contact us at the address below:

Electrolux Group (Irl) Ltd
Long Mile Road, Dublin 12, Republic of Ireland
Tel: +353 (0)1 4090751
Email: service.eid@electrolux.ie

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.

Downloaded From Microwave-Manual.com Manuals

- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if…")
If you were not able to remedy the problem yourself, please contact the Customer Service Department or one of our service partners.
In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S-No.) (for numbers, see rating plate)
- Type of fault
- Any error message displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:
Model description: .....
PNC: .....
S-No: .....

Downloaded From Microwave-Manual.com Manuals

Downloaded From Microwave-Manual.com Manuals

www.electrolux.com

To buy accessories, consumables and spare parts at our online shop please visit:
www.electrolux.co.uk

Download From Microwave-Manual.com Manuals